



Instruction for assembling


Email: service@jiameiinc.com



Instruction for assembling

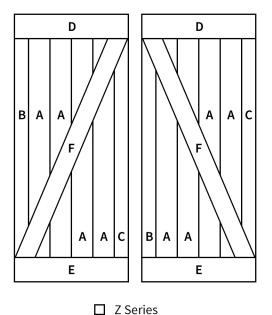

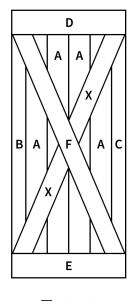

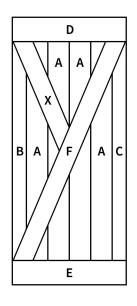

☐ X Series

☐ Y Series

#### PLEASE DECIDE THE APPEARANCE BEFORE ASSEMBLE

**SIDE VIEW** 

A: Middle Plank

**B**: Left Outside Plank

C: Right Outside Plank

**D**: Top Plank

\_\_\_

E: Bottom Plank

F: Diagonal Cross Plank

X: X Plank



SINGLE DOOR

R □ 24" × 84"

□ 28" × 84"

□ 30" × 84"

□ 36" × 84"

□ 38" × 84"

☐ 42" × 84"

SIZE

\_\_\_\_\_

**DOUBLE DOOR**  $\square$  48" × 84"

□ 56" × 84"

□ 60" × 84"

□ 72" × 84"

□ 76" × 84"

□ 84" × 84"

**TOOLS NEEDED** 

















Avoid direct sunlight.



Avoid moisture.




Avoid rain.




Instruction for assembling

#### **Z** Series

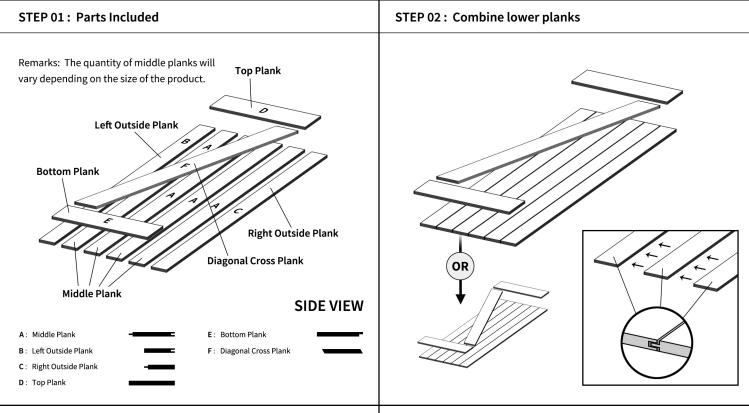


#### STEP 03: Combine upper and lower planks

Once all planks are flush and squre, secure the top and bottom planks with the screws provided. Using the clamps secure all 4 comers. With the pre-drilled holes as your guide, drill(1/8"bit) a shallow pilot hole into 4 corner holes. Do not drill completely through the door plank. Using a screw driver insert screws into the 4 corner pre-drilled holes. Continue process with the remaining screws. Make sure all screws are installed and secure. It is important to check that all planks are

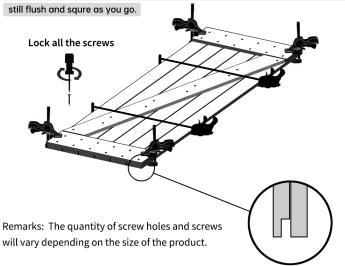


## STEP 04: Installing door and track

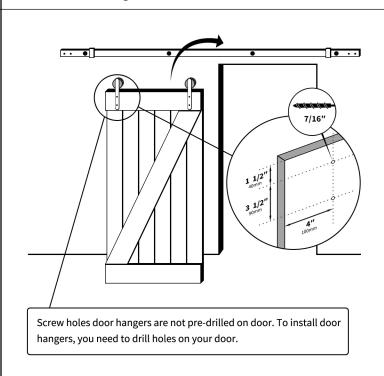




Instruction for assembling

#### **X Series**

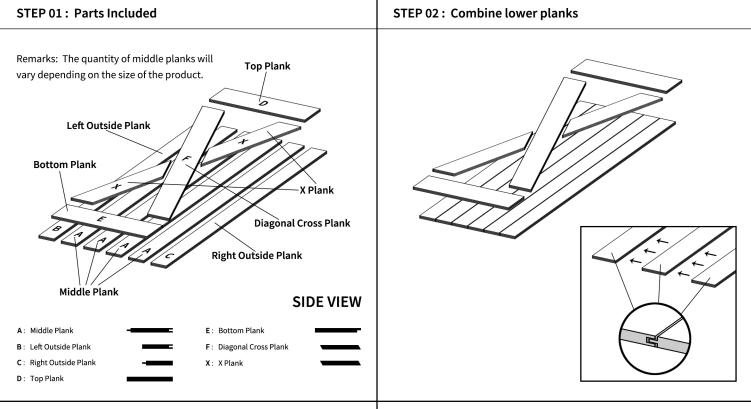


#### STEP 03: Combine upper and lower planks

Once all planks are flush and squre, secure the top and bottom planks with the screws provided. Using the clamps secure all 4 comers. With the pre-drilled holes as your guide, drill(1/8"bit) a shallow pilot hole into 4 corner holes. Do not drill completely through the door plank. Using a screw driver insert screws into the 4 corner pre-drilled holes. Continue process with the remaining screws. Make sure all screws are installed and secure. it is important to check that all planks are

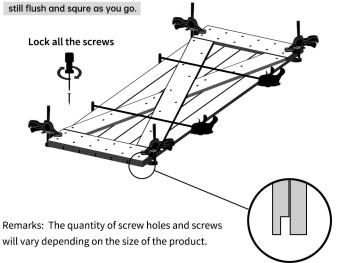


## STEP 04: Installing door and track

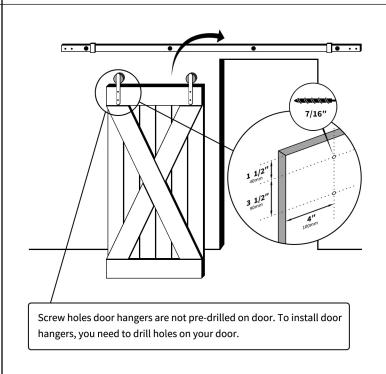




Instruction for assembling

#### **Y Series**

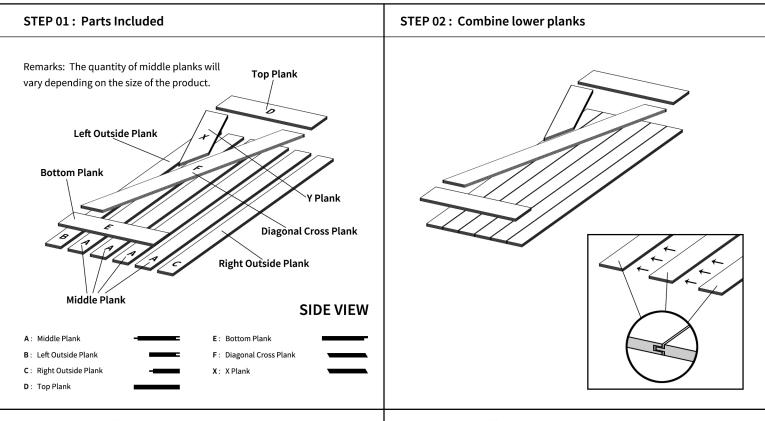

#### STEP 03: Combine upper and lower planks

Once all planks are flush and squre, secure the top and bottom planks with the screws provided. Using the clamps secure all 4 comers. With the pre-drilled holes as your guide, drill(1/8"bit) a shallow pilot hole into 4 corner holes. Do not drill completely through the door plank. Using a screw driver insert screws into the 4 corner pre-drilled holes. Continue process with the remaining screws. Make sure all screws are installed and secure. It is important to check that all planks are

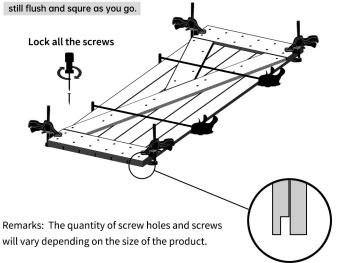

#### STEP 04: Installing door and track

